

## Other products from GSD

### standalone products

GSD also offers fully functional standalone door controls for less complex door management. This attractive design, with modern aesthetics, will complement any building

- GSD Digital Keypad
- GSD Proximity Switch
- GSD Pin&Prox Switch
- GSD Biometric Switch

#### Features:

50 users

Access control

Door Monitoring

Manager User

Fire and Intruder alarm interface

Backlighting

Tamper resistant

5 amp relays

Indoor or outdoor use

Robust polycarbonate housing with stainless steel keys

Mounts onto a standard electrical back box



global security devices



global security devices



### Contents

Initial Setup 2

Installation Diagrams 4

Wiring Diagrams 6

Enrolling Door Controls 12



## Technical Specs

Power Supply	12V DC
Current consumption	70mA
Current consumption with load (max)	100mA
Relay Contact Rating	5 Amps / 240V ac
Operating Temperature	-20 °C to +60 °C
Moisture Resistance	IP 67
Dimensions - Flush Mount	W. 87mm D. 21mm H. 119mm
- Surface Mount	W. 87mm D. 35mm H. 119mm
Number of Users	30000


## Initial Installation

The Door Control should be Factory Defaulted after installation. This will restore all default settings to the Door Control and will unenrol it from any existing GSD Controller.

The Door Control will then start to scan and enrol on a GSD controller.

Refer to the section 'Enrolling Door Controls' on page 12 for instructions on how to configure the GSD Windows Software.

## Wiring Diagram - Smart Slave

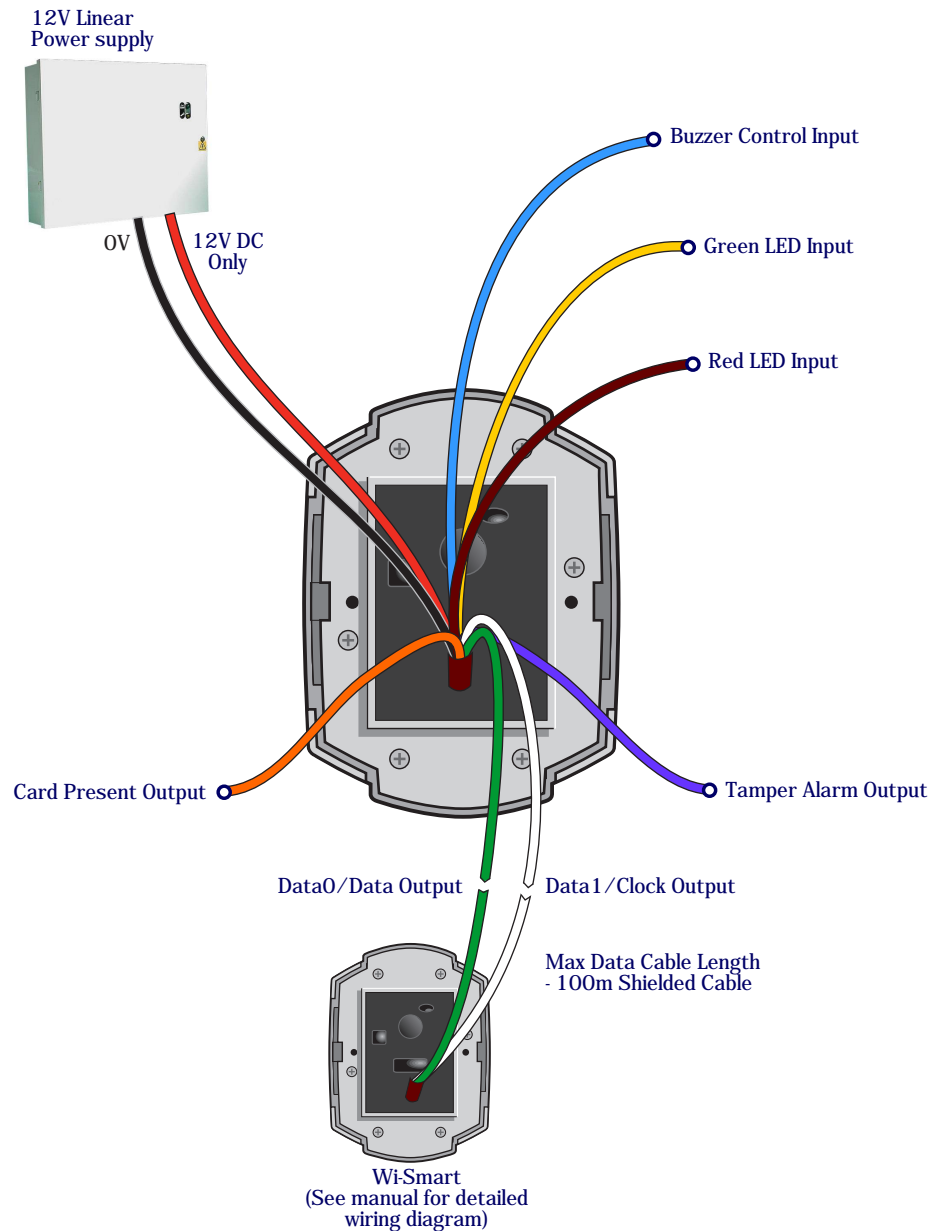

## Restoring Factory Settings: Wi-Smart

Step	Description
1	Present Programming Card 2 Times <span>Programming Card x 2</span>
2	Present Any Card Once <span>AnyCard x 1</span>

Note: Add a programming card to the Door Control. The Door Control must be disabled first if it has been enrolled onto a GSD Network Controller. Follow the method below to add a programming card to the Door Control.

## Adding a Programming Card

Step	Description
1	Remove security caps and power down unit.
2	Power up unit and Present Any Card 2 times immediately. This card is now the Programming Card for the unit. Refit security caps <span>AnyCard x 2</span>


## Factory Default PIN codes

The following PIN codes are the Factory Default Settings:

- The Default Engineer code is '6666'
- User PIN '1111'


Note: The User PIN '1111' is deactivated when the Door Control is enrolled onto a GSD Network Controller.

When Surface Mounting the Door Control a Surface Mount Collar is required.  
- Fix Surface Mount Collar to wall, ensure arrow is pointing upwards

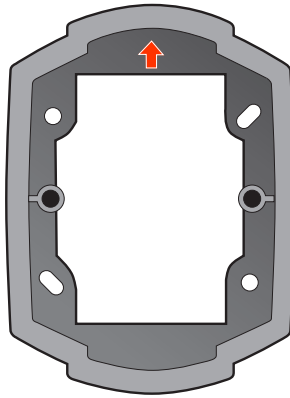

### Surface Mounting

After fixing Surface Mount Collar to wall (as above) and wiring is complete as per wiring diagrams on pages 6-11, the Door Control may then be screwed to Surface Mount Collar using security screws provided. Both Security Caps are then clipped onto the Door Control.

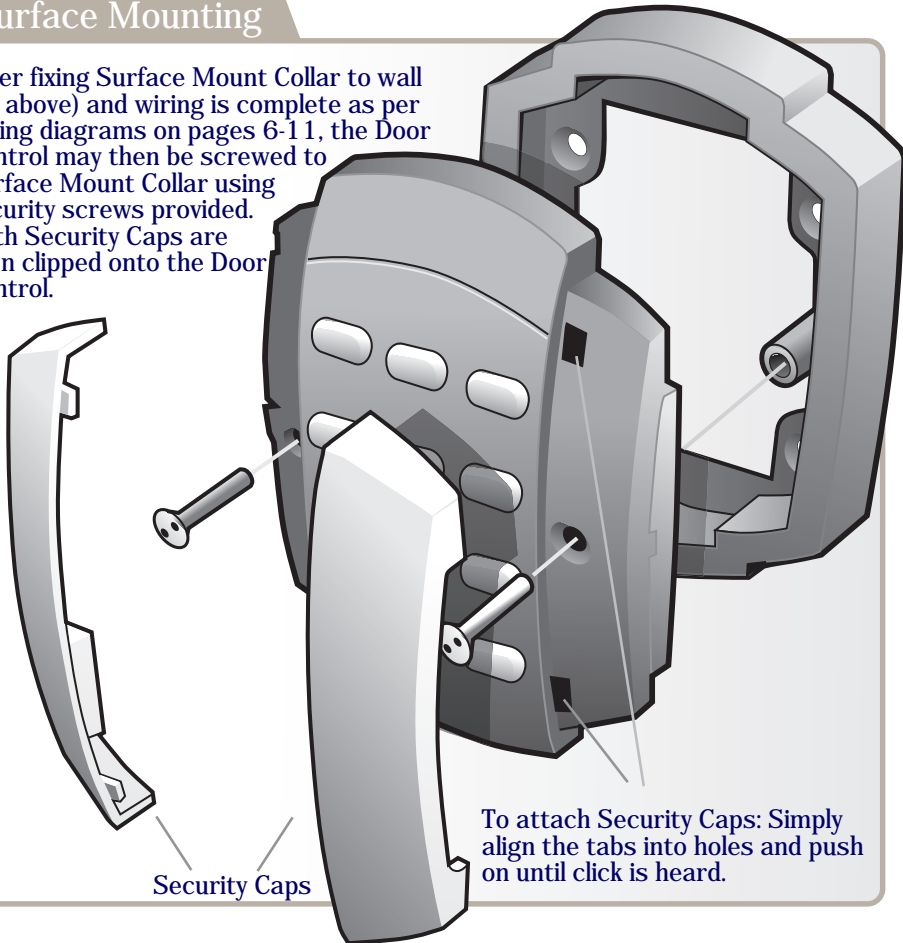

To attach Security Caps: Simply align the tabs into holes and push on until click is heard.

Security Caps

### Assigning a Door Address on Wireless Network


Step	Description
1	On the Controller screen: Click 'Wireless Network' and then Click 'Allow Doors to Join this Controller'
	All Door Controls that don't have an address start to beep out the next available address. The Keys will also illuminate to indicate the next address. e.g Keys 1 & 5 will be ON for address number 15.
2	Hit any key on the 'beeping' Door Control to assign this address or present a Card on the 'beeping' Proximity unit to assign this address.
	When a Door Control is assigned an address, all unassigned Door Controls will start to beep the next available address.
3	When all doors are assigned: Click 'Secure Network'

Note: While assigning door addresses, leave the Controller Screen open or the network will be Secured automatically, stopping doors from joining the network.

### Assigning a Door Address on a Wired 485 Network

Step	Description
1	Right Click on the Controller Icon & select 'Manually Assign Addresses'
	Follow Step 2 above to complete the process.



Adding Door Controls

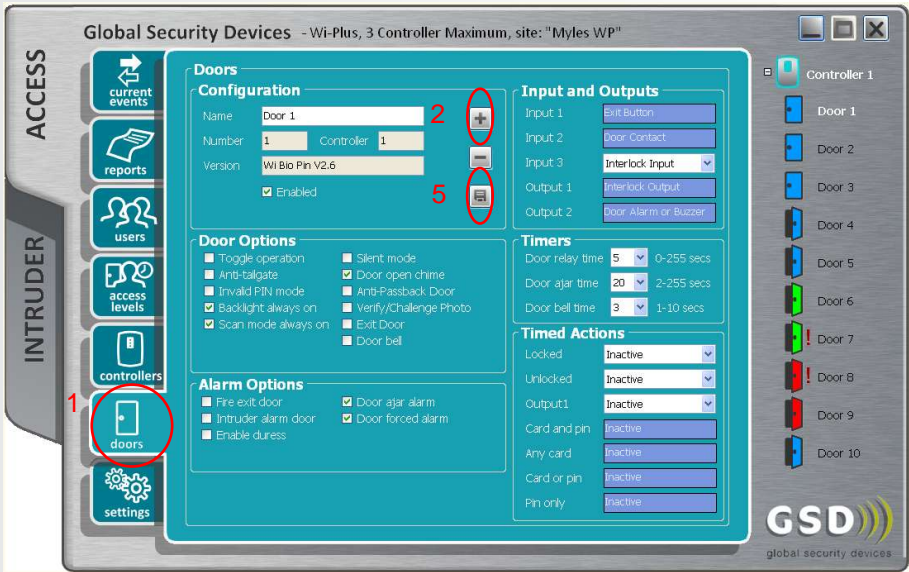

Step	Description
1	Click the Doors Icon on the left hand toolbar (see 1 above)
2	Click 'Add New Door' (see 2 above)
3	The Door is added to the Controller.
4	Configure the required Door settings : Door Timers, Alarm Options, Door Options, Timed Actions, Inputs & Outputs.
5	Click 'Save' to transmit the changes to the GSD Controller. (see 5 above)

Flush Mounting


Door Control is mounted to electrical pattress box using security screws provided. Both Security Caps are then clipped onto Door Control.

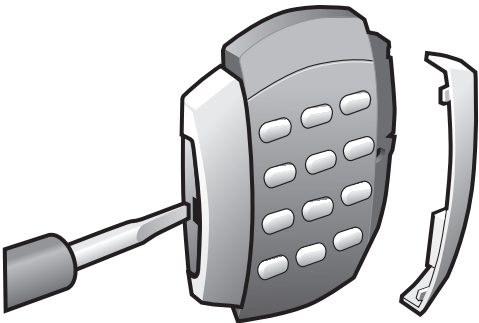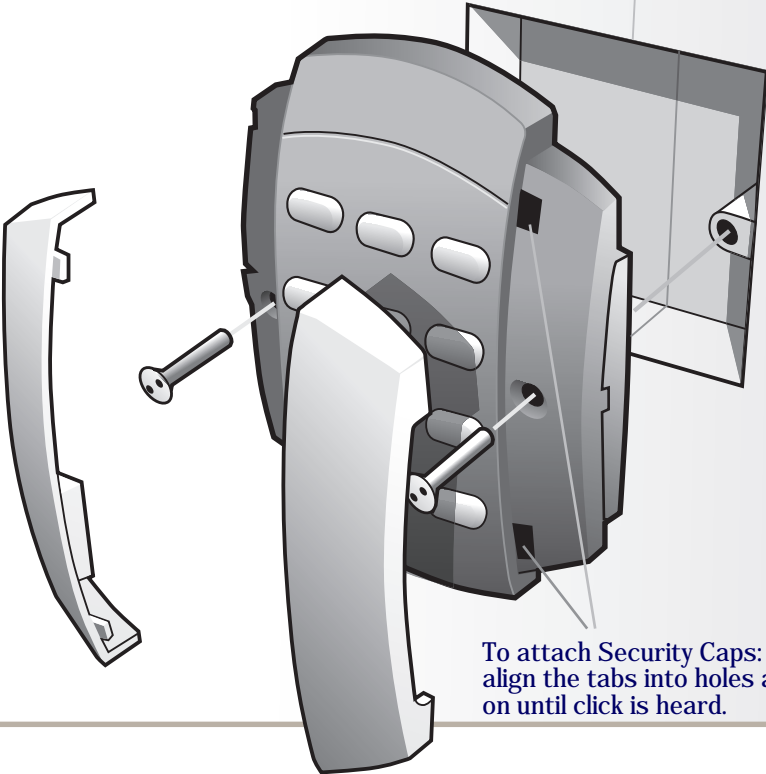


To release Security Caps push a screwdriver into slots on the side and pull forward.




## Wiring Diagram with Slave Reader

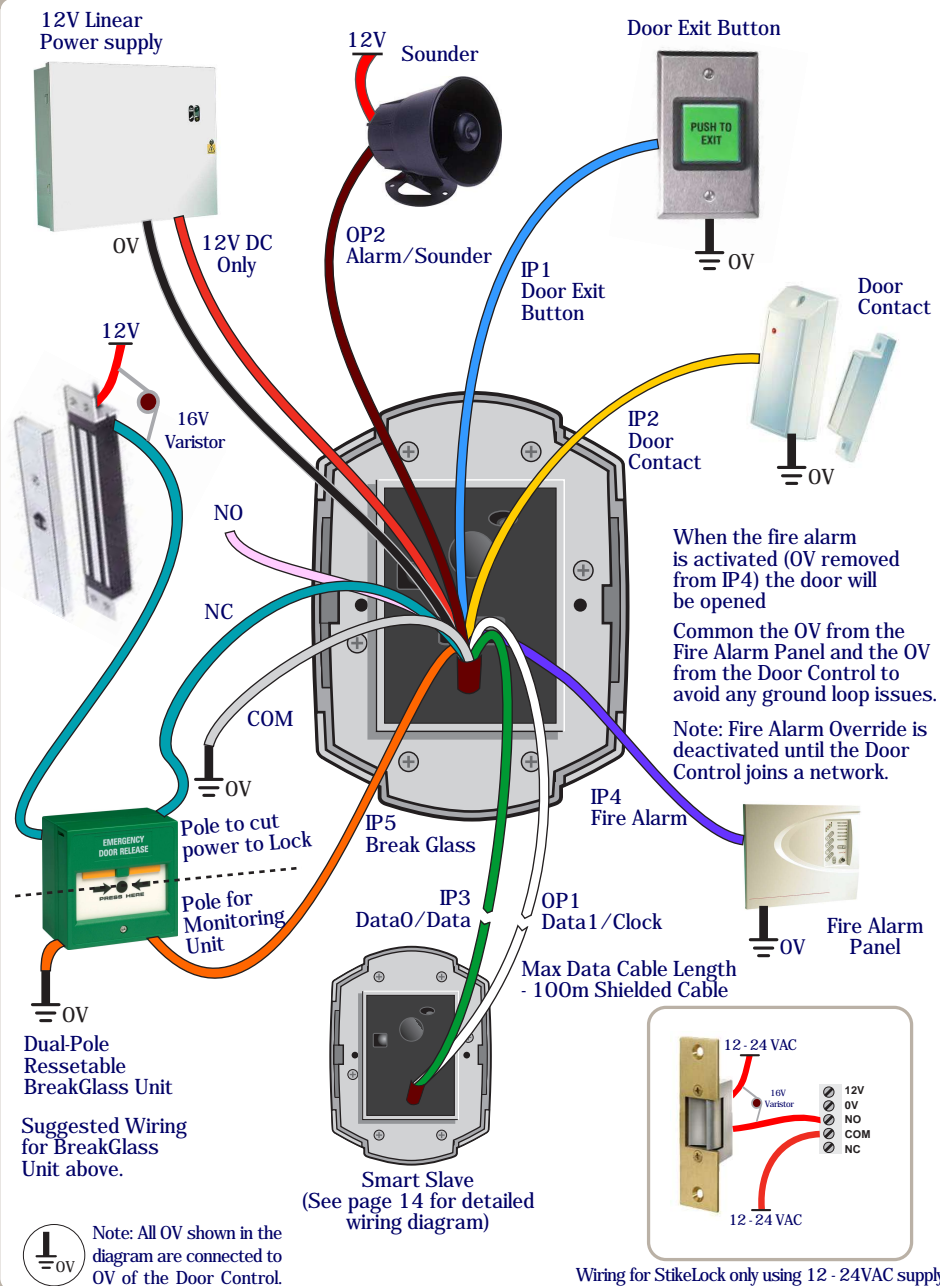


## Wiring Diagram with External IP3 Function

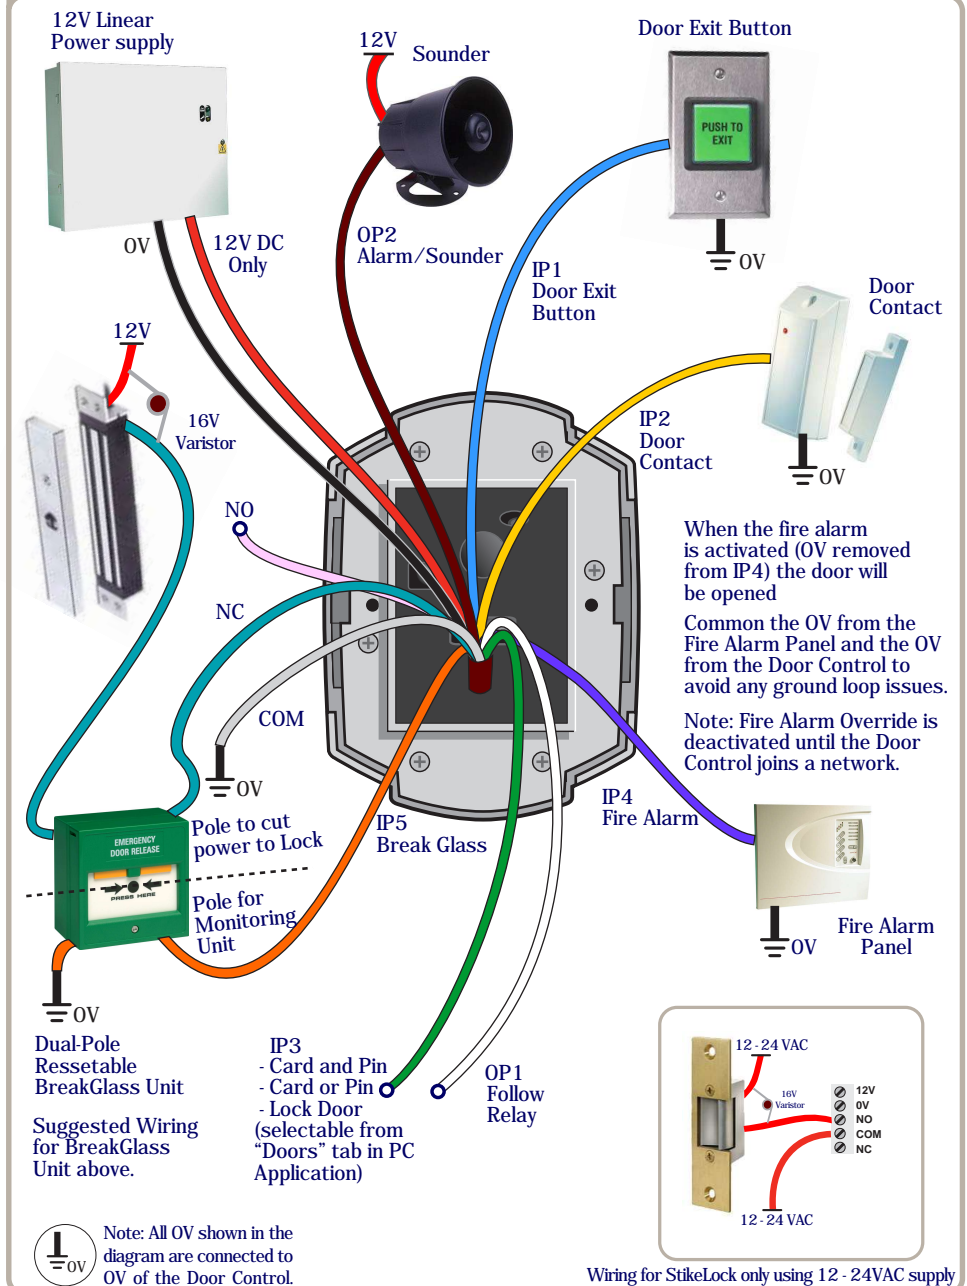

## Wiring Diagram with Interlock Connection

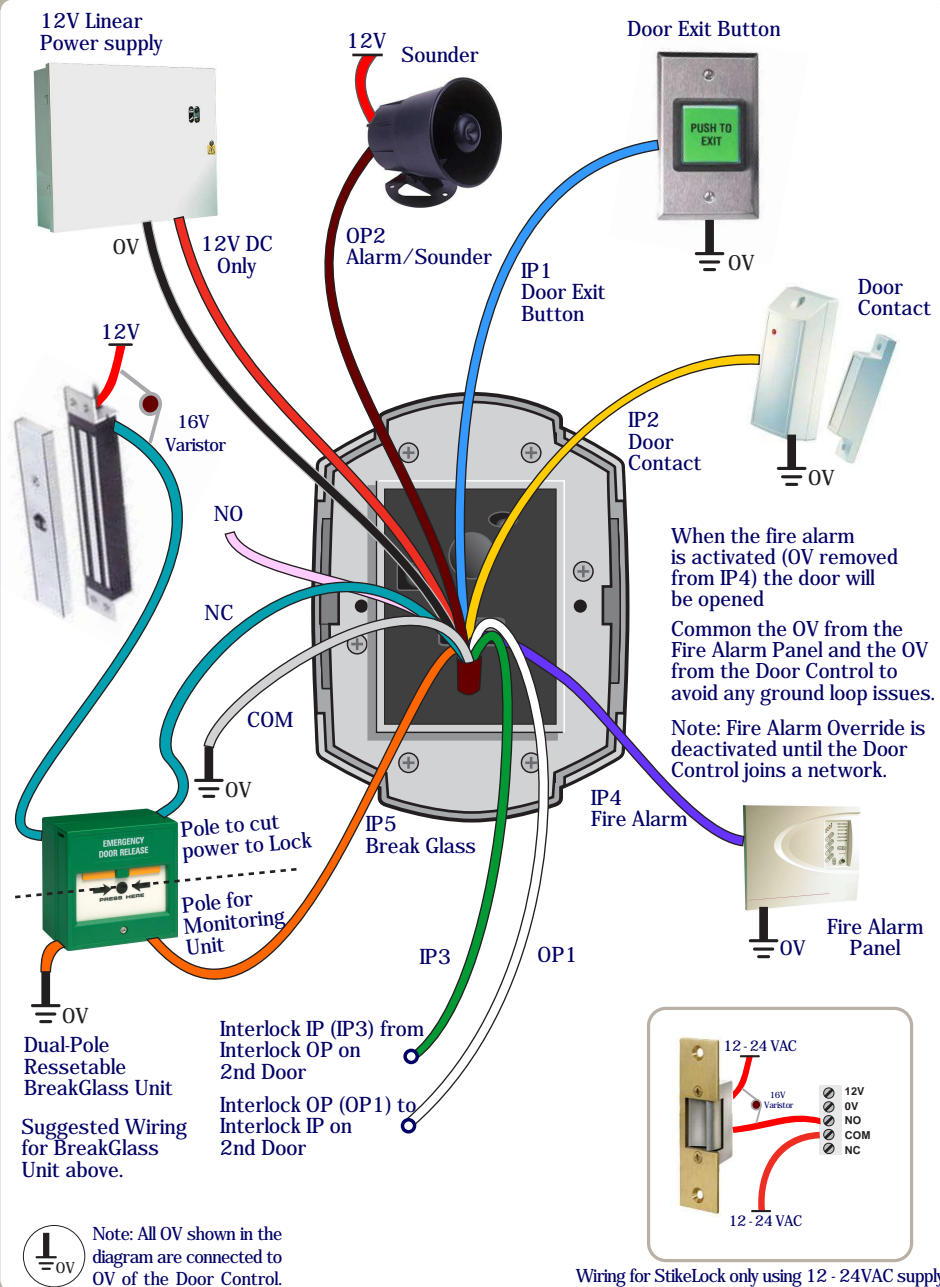

## Wiring Diagram with Intruder Alarm Panel

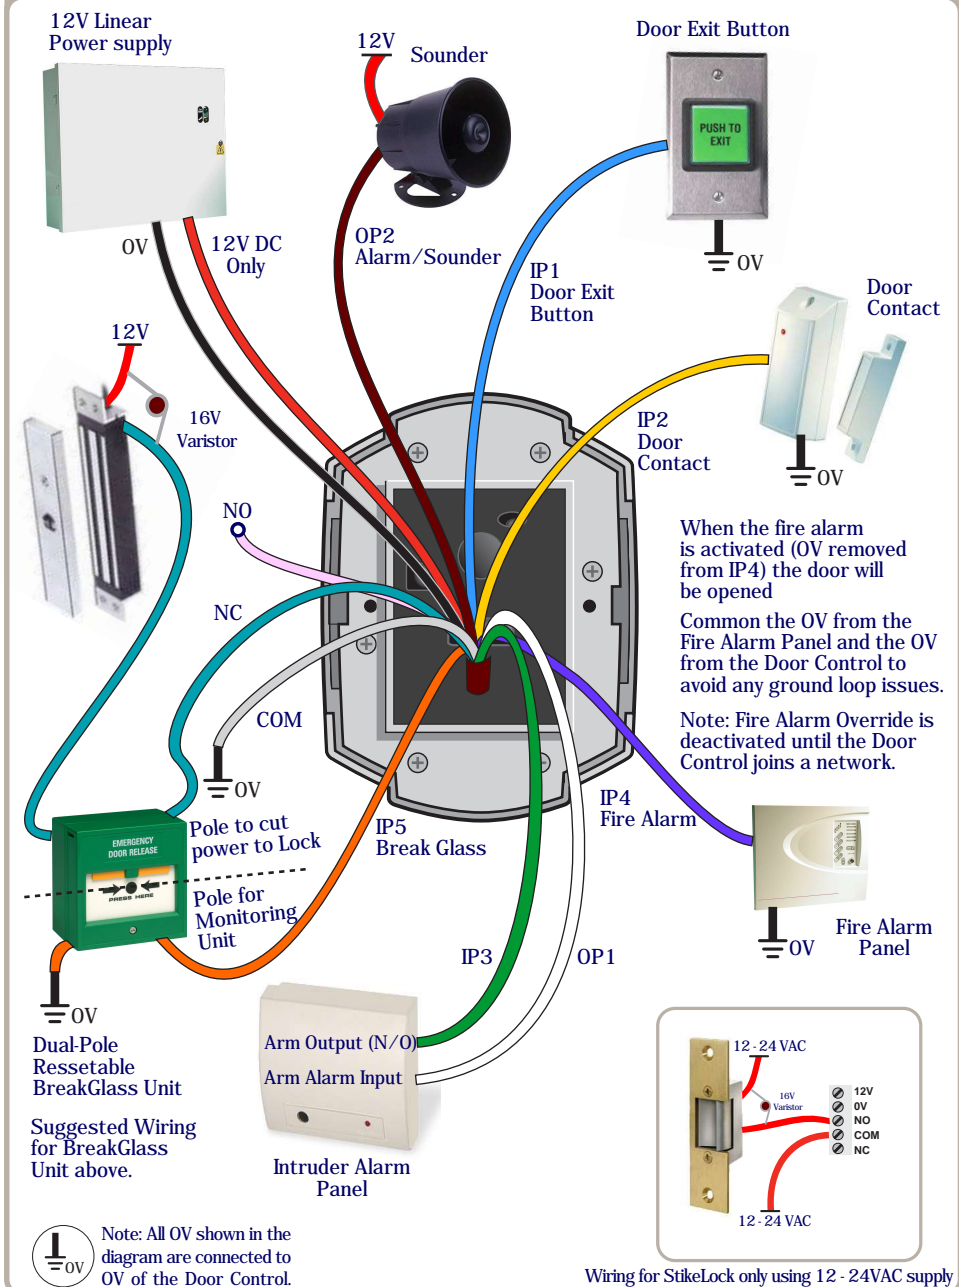

**12V Linear Power supply**

**12V DC Only**

**0V**

**16V Varistor**

**12V**

**Door Exit Button**

**IP1 Door Exit Button**

**OP2 Alarm/Sounder**

**12V Sounder**

**0V**

**Door Contact**

**IP2 Door Contact**

**0V**

**When the fire alarm is activated (OV removed from IP4) the door will be opened**

**Common the OV from the Fire Alarm Panel and the OV from the Door Control to avoid any ground loop issues.**

**Note: Fire Alarm Override is deactivated until the Door Control joins a network.**

**Fire Alarm Panel**

**0V**

**IP4 Fire Alarm**

**OP1 Data1/Clock**

**Data0/Data**

**IP3 Break Glass**

**Max Data Cable Length - 100m Shielded Cable**

**Smart Slave**

**(See page 14 for wiring diagram)**

**Pole to cut power to Lock**

**Pole for Monitoring Unit**

**Dual Pole Resettable BreakGlass Unit**

**Suggested Wiring for BreakGlass Unit above.**

**Note: All OV shown in the**

**12V-24 VAC**

**16V Varistor**

**12V**

**0V**

**NO**

**COM**

**NC**

**12-24 VAC**

**Note:** All OV shown in the diagram are connected to OV of the Door Control.



Wiring for StrikeLock only using 12 - 24VAC supply